

# ***Scenronic***

## METERED DOSE AIR FRESHENER

IMPORTANT: Read these instructions before installing the batteries

### FIXING INSTRUCTIONS – *Scenronic* only

Open the service door on the dispenser to access the fixing kit and door lock unit. The door is hinged at the bottom and opens from the top.

Ensure the fixing position is reasonably even and free from electrical cables, pipes etc. beneath the surface.

It is **VERY IMPORTANT** that the *Scenronic* is not fitted at a height or position where the aerosol can spray on to or close to a person's face. A minimum height of 2.2 metres is recommended.

Mark the wall vertically at 82mm centres, drill to a depth of 35mm approx. with a 5.5mm masonry drill and insert the wall plugs. Drive in the screws until there is a 5mm gap between the screw head and the wall. Hang the scenronic on the screws and secure,

### FIXING INSTRUCTIONS – *Scenronic* In a Stainless Case

Depending on the model purchased, either unlock the front cover using the key, or remove the bottom allen screw with the key supplied. Remove the steel front cover. Position the chassis on the wall where required and mark through the fixing points. Screw the screws into the wall leaving about 10mm protruding. Place the plastic Scenronic chassis into the steel chassis and hang both items together on the screws and tighten. After setting the timings (see below) replace the stainless front and lock with either the key or allen key.

### SERVICE INSTRUCTIONS

Ensure the outer switch, located on the top right hand of the cabinet, is in the OFF position (down) and insert two **ALKALINE 'D'** size batteries **ensuring the polarity is correct**.

Remove protective cap from the aerosol and install the can into the dispenser.

**CAUTION: Turn the outer switch OFF before changing the can. The dispenser activates immediately when switched on. To avoid accidental spray contact with your eyes or face, do not stand in front of the dispenser when switching on. Switch the dispenser on by moving the outer switch up to the ON position.**

### ADJUSTING THE SETTINGS

The cycle time on the dispenser is pre-set for continuous operation at 15 minute spray intervals for 30 day use. This cycle time can be adjusted by turning the circular timing arrow (see picture) mounted inside the cabinet clockwise to increase the spray interval and anti-clockwise to decrease it. If 24 hour continuous operation is not required, move the selector switch mounted on the inside of the cabinet to either 'day' (operate during hours of light) or 'night' (operates during darkness).

The green indicator flashes intermittently during its operation cycle and starts to fade when the batteries are getting low.

The red indicator flashes when the spray is activated.

**LEAVE THESE INSTRUCTIONS WITH THE USER**


# ADJUSTING THE SHELF

If you are using the shelf to support the fragrance can, it must be turned round as below:




Slide the shelf out

Ensure the ALKALINE batteries are fitted the correct way

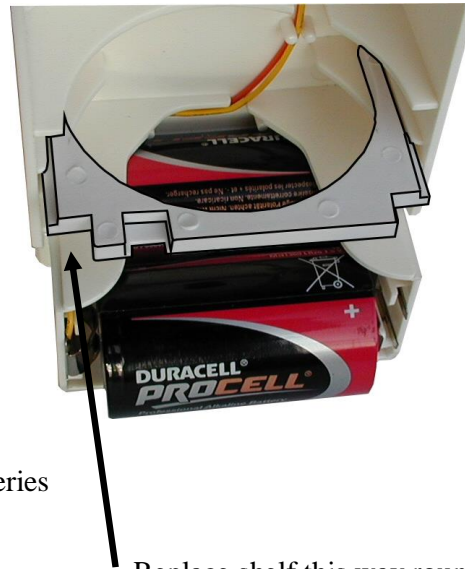

Replace shelf this way round

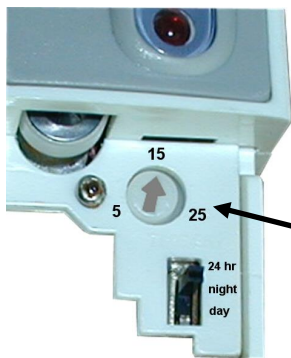

Adjust timings

Spray interval

Ensure the hammer is in the up position before inserting the can. Take care if using the can nozzle to push the hammer up as it may spray.

